

Update News

If you are finding it hard to get the ballast cable through the gland, please do the following:

- ❶ Undo gland and remove the rubber seal.
- ❷ Feed the cable clampnut onto the cable.
- ❸ Place the rubber seal over the cable.
- ❹ Now feed the cable and rubber seal through the teeth of the gland, opening the teeth if required.
- ❺ Once the required amount of cable is through the gland (and the rubber seal is between the gland teeth) tighten the clamp nuts.

Also included in this bag are 6 repair bolts. If you should happen to overtighten or cross thread the bolts holding the top spine cover on, please use these bolts. They will cut their own new thread in the spine and clamp the lid in place. Thank you.